



8131 East 46 Street Tulsa, Oklahoma 74145  
 Tel: +1-918-627-8484 Fax: +1-918-627-8446  
 Air Agency Certificate No. HJ2R874K

CAPABILITIES LIST  
 6-MAR-2019  
 REV. A

Part Number	Nomenclature	Engine/Effectivity	ETI INC. DER	Description/Title
9295M30G05	Vane Actuation Ring Segments	LM2500/LM6000	7045	STAGE 3
9295M30G06	Vane Actuation Ring Segments	LM2500/LM6000	7045	STAGE 4
9079M20G13	Vane Actuation Ring Segments	LM2500/LM6000	7098	STAGE 5
1333M65G01	Vane Actuation Ring Segments	LM2500/LM6000	7045-Repair	IGV
1333M65G02	Vane Actuation Ring Segments	LM2500/LM6000	7045-Repair	Stage 1
1333M65G03	Vane Actuation Ring Segments	LM2500/LM6000	7045-Repair	Stage 2
1333M65G06	Vane Actuation Ring Segments	LM2500/LM6000	7045-Repair	Stage 5
1333M65G07	Vane Actuation Ring Segments	LM2500/LM6000	7045-Repair	Stage 6
L44860P01	VSV Stage 3 & 4 Bushing Housing	LM 6000	7101-New	VSV Stage 3 & 4 Bushing Housing
L44860P02	VSV Stage 5 Splitline Bushing Housing	LM 6000	7101-New	VSV Stage 5 Splitline Bushing Housing
L44861P01	Stage 3 & 4 Splitline Flanged Bushing	LM 6000	7101-New	Stage 3 & 4 Splitline Flanged Bushing
L44861P07	Stage 5 Splitline Flanged Bushing	LM 6000	7101-New	Stage 5 Splitline Flanged Bushing
L44862P02	Stage 3 & 4 Splitline Washer	LM 6000	7101-New	Stage 3 & 4 Splitline Washer
L44862P03	Stage 5 Splitline Washer	LM 6000	7101-New	Stage 5 Splitline Washer
L44867P03	VSV Stage 4 Splitline Bushing Housing	LM 6000	7101-New	VSV Stage 4 Splitline Bushing Housing
L44867P02	VSV Stage 5 Splitline Bushing Housing	LM 6000	7101-New	VSV Stage 5 Splitline Bushing Housing
L44867P01	VSV Stage 3 Splitline Bushing Housing	LM 6000	7101-New	VSV Stage 3 Splitline Bushing Housing
L44867P04	VSV Stage 5 Splitline Bushing Housing	LM 6000	7101-New	VSV Stage 5 Splitline Bushing Housing
9146M80P03	Sleeve, Actuation Arm Compressor Stator Bushing	LM Series -All Models	7108-New	Sleeve, Actuation Arm Compressor Stator Bushing
9051M50G04	IGV Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9051M51G04	Stg 1 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9051M52G04	Stg 2 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9051M53G04	Stg 3 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9051M54G04	Stg 4 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9051M55G04	Stg 5 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9051M56G04	Stg 6 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9137M95G04	Stg 5 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9137M95G05	Stg 5 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9181M41P02	Stg 3 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor
9181M42P02	Stg 4 Connecting Link	LM2500/LM6000	72-32-09 Repair 001, 002, 003	Compressor